


[EN]

Dry stone walls


Building instructions

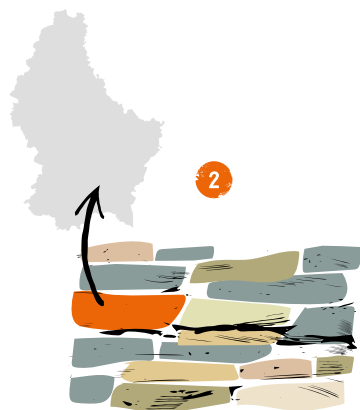

Selection of stones: you should always use stones that are typical of the region; on the luxembourgish Moselle this is limestone.




End with a cap stone, and plant with goldmoss stonecrop or thyme.

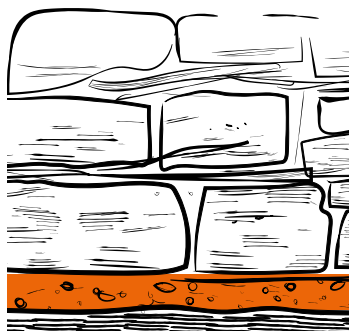

1

Foundation consisting of an approx. 40 cm high layer of sand and gravel, which is tamped and compacted (not necessary if the subsoil is highly compacted). Foundation stones are embedded into the ground.

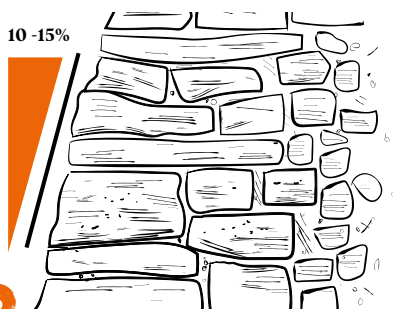

3

Place the bricks accurately, place through stones regularly, and carefully layer the backing stones. Keep to an incline of 10-15 %.