


[EN]

# Dry stone walls


## Building instructions

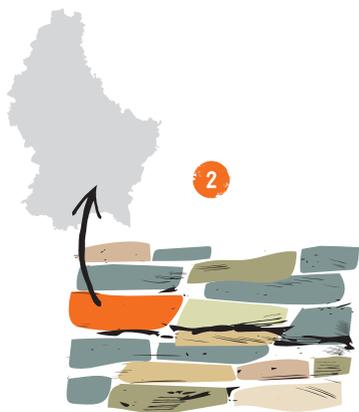

Selection of stones: you should always use stones that are typical of the region; on the Luxembourgish Moselle this is limestone.



End with a cap stone, and plant with goldmoss stonecrop or thyme.

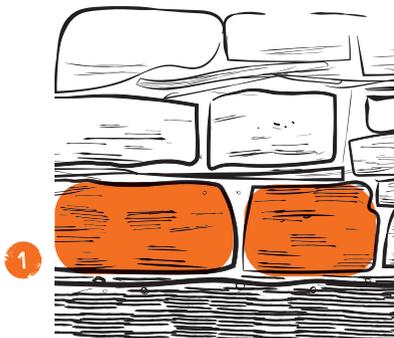

1

The thickest stones are used as foundation stones: they are set about 10 centimetres into the ground and placed directly on the firm subsoil. Like all stones in a dry-stone wall, the foundation stones must not shift.



3

Place the bricks accurately, place through stones regularly, and carefully layer the backing stones. Keep to an incline of 10-15 %.